

contigo®




AUTOSEAL® Travel Mug Care and Use Instructions



WARNING

- Careful: The beverage you are about to enjoy is very hot. For best result always use caution.
- Always depress the AUTOSEAL® button with mug in upright position before tipping forward to drink. This will release any built up pressure.
- When done drinking, continue holding the button and return mug to upright position to prevent residual pooling in the drink spout. Release the button to automatically seal.
- Keep away from children when filled with hot liquids.
- Prior to drinking, check to ensure the lid is properly threaded to the body and screwed down 100 percent. Button should be depressed with mug in upright position each time the lid is screwed on.
- If filling with boiling liquids, allow liquid to cool WITH LID OFF for at least 3 minutes, then screw lid on.
- Coffee brewed below boiling temperatures can be poured directly from coffee makers into the mug without waiting for liquid to cool down.
- In the locked position, the AUTOSEAL button cannot be depressed. This lock feature is designed to avoid unintended depressing of the push-button when the mug is being transported full of liquid. Press down on the lock icon on the top of the lid exposing the red indicator strip. To unlock the button, press the side of the lock with no icon.
- Do not overfill. Fill liquids to just below the threading in the body.
- Do not microwave and do not freeze.
- Do not use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.

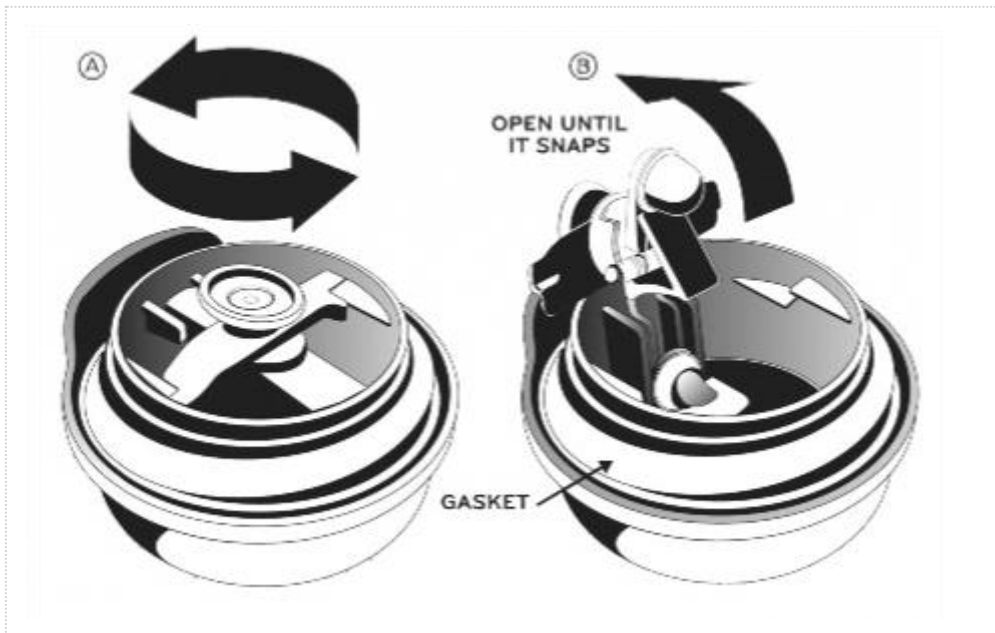

USAGE RECOMMENDATIONS

- Suitable for cold and hot beverages.
- To screw the lid on easily and safely, place the lid on top of the mug and apply downward pressure. Rotate the lid clockwise to tighten.
- The AUTOSEAL® lid that came with your new purchase is designed to fit your mug design. Not for use with other products.
- The AUTOSEAL® lid is designed to help prevent spills
- Following your purchase, wash all parts with soapy water before use. Rinse thoroughly and dry. Always store with lid removed to allow parts to dry completely.
- All lids are top-rack dishwasher safe.
- If you have purchased a mug that has a brushed stainless steel body (not coloured or painted), the body is top-rack dishwasher safe.
- If you have purchased a mug that has a stainless steel COLOURED/PAINTED body, it is recommended that it is hand-washed.
- Turn the lid counter-clockwise to remove it from the mug. Turn the lid upside down and rotate the locking oval disk in center of lid 45 degrees counter-clockwise to unlock. Fold out the undercarriage until it snaps, holding the open position for easy access and cleaning. Do not remove circular rubber gasket from lid.
- Rinse the drink spout with warm water immediately after use and prior to putting into the dishwasher.
- Turn the lid upside down allowing water to run through the drink spout.
- Place the lid on the top rack of your dishwasher with the undercarriage in the open cleaning position.
- To hand clean the top and underside of the lid:
- Swish lid in hot, soapy water and rinse thoroughly holding the lid both right side up and upside down.
- Leave lid parts open to dry.

- Prior to use, lock undercarriage back into place.